

INDEX

A

accelerated graphics port (AGP).
 See also ports; video card
 expansion slots, 17
 in general, 153–154
 direct memory execute, 154
ACPI. *See* Advanced Configuration and Power Interface
adapter card. *See also* expansion cards; SCSI host adapter
 hard drive, 13, 280, 340, 344, 346
Address Resolution Protocol (ARP), 944
ADSL. *See* Asymmetric Digital Subscriber Line
Advanced Configuration and Power Interface (ACPI), 1009
Advanced SCSI Programming Interface (ASPI), 289
Advanced Transfer Cache (ATC), 120
AGP. *See* accelerated graphics port
Aladdin V chip, 133
AMD, 123, 125
American National Standards Institute (ANSI), 304
ammeter, 558
AMR. *See* audio modem riser
ANSI. *See* American National Standards Institute
ANSI.SYS, C1–C4
anti-virus software. *See* virus detection software
API. *See* application program interface

application program interface (API), 671
applications software. *See also* net-working software; operating system; software
 conflicts with, 644–647
 DOS applications, 647–648
 DOS filenames, 40
 executing, 70
 in general, 43–44
 installing
 copying program into memory, 49
 in general, 44–46, 643–645
 program file launch, 46–48
 with Windows 9x, 49–50
 OS management of, 40
 peripheral devices and, 454
 problems with, 1004
 suites, 43
 32-bit protected mode, 190
 uninstalling, 648–649
ARP. *See* Address Resolution Protocol
ARPAnet, 937
ASCII character set, C1–C4
ASPI. *See* Advanced SCSI Programming Interface
Asymmetric Digital Subscriber Line (ADSL), 885
ATC. *See* Advanced Transfer Cache
ATTRIB command, 312–313
audio modem riser (AMR), 154, 842. *See also* modems
Auto Detection, 300, 347. *See also* Plug and Play

AUTOEXEC.BAT. *See also* DOS
 bootable disk and backup copy, 76–77
 copying, 101, 619
 corrupted, 384
 editing, 75–77
 loading, 73–74, 78, 204, 608
autorange meter, 568

B

backbone, FDDI, 909
backup domain controller (BDC), 689
backup hardware. *See also* hardware
 discussed, 1043–1050
 removable drives, 1049–1050
 tape drives, 1044–1048
backups. *See also* data protection; tape drives
 defined, 101
 disk cloning software, 1056
 in general, 1043
 hard drive, 101–102, 361, 433–434, 1030
 methods
 child, parent, grandparent method, 1050
 full, incremental, differential, 1051–1052
 multiple directories, 309
 planning for disaster recovery, 1059–1060
Registry, 643
scheduling, 1052–1054
software, Windows 9x utility, 1054–1056

- Windows 2000 dynamic drives, 1059
 - volumes, 1059
 - bandwidth, modems, 881
 - batch files
 - DOS, 313–314
 - Windows 9x, 317
 - battery, 158, 417
 - baud rate. *See also* modems modems, 844
 - BDC. *See* backup domain controller
 - beeps, error indicated by, 71
 - binary number system, 3–4, D6–D8
 - binding, 945
 - BIOS. *See also* Flash BIOS; software
 - booting and, 26, 29, 68–69
 - device drivers and, 87–88
 - embedded, 449–450
 - function of, 25, 26
 - on-board BIOS, 26
 - startup BIOS, 26
 - system BIOS, 26
 - in general, 22, 134–136
 - Auto Detection, 300, 347
 - legacy hardware, 135
 - hard drive, 299–308
 - enhanced BIOS, 305
 - incompatibilities, 137
 - Plug and Play, 136, 138, 300, 449, 628
 - POST test, 66
 - ROM BIOS, 22–23, 68–69, 134–136, 341
 - upgrading, 341, 351
 - bit map file, 513
 - boot. *See also* boot record; master boot record; setup data
 - BIOS role in, 26, 29, 72–73
 - master boot record, 72
 - dual boot, 359–360, 626, 675
 - emergency startup disk, 255–256
 - in general, 64–66, 188
 - hard/cold, 67
 - process, 66–67
 - AUTOEXEC.BAT and CONFIG.SYS editing, 75–77
 - OS process, 73–75
 - power-on self test, 66, 67, 70–72
 - ROM BIOS loads OS, 68–69
 - Windows 95, 77–79
 - Windows 98, 79
 - ROM role in, 179
 - system resources defined, 66
 - troubleshooting, 389–390, E2–E5, E26
 - warm/soft, 67
 - Windows 2000, 754–757
 - Windows NT, 701–705
 - boot disk, 828, 1030
 - boot record. *See also* master boot record
 - damaged, 380–381
 - boot sector virus, 1033–1034. *See also* viruses
 - bridges, 907, 915–916
 - buffer. *See also* memory
 - DOS, 328–329
 - memory, 73, 200
 - bus. *See also* memory bus
 - accelerated graphics port, 153–154
 - audio modem riser, 154
 - backside bus, 119
 - bus speed, setting, 155–157
 - 8-bit and 16-bit ISA bus, 79–81
 - evolution, 142, 143–144
 - expansion, 142
 - FireWire, 144, 147–148
 - frontside bus, 120
 - in general, 10, 16, 17, 20, 118, 141–142, 144–145, 154
 - EISA, 146
 - ISA, 146
 - MCA, 146
 - PCI, 149–153
 - USB, 146–147
 - VESA, 149
 - i.Link/IEEE 1394, 147–148
 - local, 142, 144
 - I/O, 148–149
 - SCSI, 290
 - throughput, 142, 153
 - for video card, 495–496
 - bus architecture, in CPU, 116–117
 - bus mastering, 153
 - bus speed, determining, 118
 - byte, D2
- ## C
- cabinet file, 257–258
 - cables, 8. *See also* hardware
 - CD-ROM, 521, 522
 - connectors
 - BNC, 904
 - RJ-45, 904
 - twisted-pair, 904
 - data, 9, 15, 340
 - Ethernet, 903–904
 - floppy drive, 238, 264, 265
 - frayed, 576
 - hard drive, 13, 341
 - input/output, 466
 - keyboard, 6, 422, 485–487
 - mouse, 488
 - parallel, 463
 - power, 9, 280
 - printer, 1002
 - SCSI, 286–287
 - serial, 457

- cache memory. *See also* central processing unit; memory
 - Advanced Transfer Cache, 120
 - COAST, 11, 180
 - discrete L2 cache, 120
 - external cache, 119
 - in general, 10, 11
 - internal cache, 116, 119, 182
 - SRAM and, 181–182
- cache on a stick (COAST), 11, 180
- call tracking, 1028
- CAM. *See* Common Access Method
- cards. *See* adapter card; expansion cards
- carpal tunnel syndrome (CTS), 484
- Carrier Sense Multiple Access with Collision Detection (CSMA/CD), 903
- Cas Latency (CL), 188
- CAU. *See* controlled-access unit
- CAV. *See* constant angular velocity
- CCITT. *See* Comité Internationale de Télégraphique et Téléphonique
- CD-ROM, 7. *See also* multimedia; peripheral devices
 - cache, 527–528
 - caring for, 519
 - CD-R/CD-RW drives, 528–529
 - configuring, 523
 - in general, 519–521
 - constant angular velocity, 520
 - constant linear velocity, 520
 - lands, 520
 - multisession, 520
 - pits, 520
 - installation, 522–525
 - troubleshooting, 540–542
 - system board and, 521
 - troubleshooting, 540–542, E19–E21
- central processing unit (CPU). *See also* hardware; Intel CPUs; personal computer
 - bus architecture, 116–117
 - bus speed, 118–119
 - setting, 155–157, 791–794
 - chip set. *See* chip set
 - coprocessor, 10, 118
 - CPU multiplier, 791–794
 - data processing procedure, 27
 - program jump, 29
 - program loading process, 85
 - wait state, 115, 150
 - described, 4, 10
 - fans, 11, 125–126
 - form factors, 127, 129–130
 - installing, 794–797
 - Intel CPUs
 - early, 117–118
 - Pentium chips, 118–125
 - processor speed, multiplier, 119, 156
 - rating, 115–116
 - data path, 116
 - functionality, 116
 - memory, 116
 - memory address, 116
 - multiprocessing, 116
 - programming code, 115
 - speed, 115
 - word size, 116
 - RISC technology, 125
 - slots and sockets, 128–130
 - pin grid array, 128
 - staggered pin grid array, 128
 - turbo mode, 117
 - voltage regulator, 130–131
 - dual-voltage CPU, 130
 - single-voltage CPU, 130
 - voltages used by, 118, 129–130
- CHDIR command, 311
- Checkit 98, 405
- chip set. *See also* central processing unit; CMOS chip
 - for CPU
 - in general, 10, 115–116, 131–133
 - Intel competitors, 133–134
- circuit boards. *See also* expansion cards; system board
 - described, 8, 9
- CL. *See* Cas Latency
- client, 37
- clock. *See* system clock
- clone. *See* personal computer
- cluster
 - floppy drive, 246
 - hard drive, 298, 299, 317
 - cross-linked/lost, 319–320, 361, 386
- cluster chain, 247, 317
- CLV. *See* constant linear velocity
- CMOS chip, 8, 10, 358. *See also* chip set
 - clearing, 791, 832
 - discussed, 23, 94–95
 - password on, 96
 - saving setup data
 - with Norton Utilities, 99–100
 - with Nuts & Bolts, 97–99
 - setup, 158–159, 417, 472, 1030
- COAST. *See* cache on a stick
- Comité Internationale de Télégraphique et Téléphonique (CCITT), 846

- COMMAND.COM
 on disc, 245
 loading, 72, 73, 78, 608
- Common Access Method (CAM),
 device drivers, 289
- communication layers, 838–841
- communications software. *See also*
 dial-up networking; modems;
 software
- in general, 867–868
 Telephony Application
 Programming Interface, 867
- for Internet access, 958–959
- software-to-modem communi-
 cation, 868–873
 AT command set, 868
- software-to-software communi-
 cation, remote control,
 873–874
- compressed volume file
 (CVF), 322
- compression. *See* data compres-
 sion; disk compression
- CompTIA. *See* Computing
 Technology Industry Association
- computer. *See* personal computer
- computer language, 3
- Computing Technology Industry
 Association (CompTIA), 1082
- CONFIG.SYS. *See also* DOS
 accessing, 200, 358–359
 copying, 101, 617
 corrupted, 384
 editing, 75–77
 loading, 73, 608
- constant angular velocity (CAV),
 519
- constant linear velocity (CLV),
 CD-ROM, 519
- controlled-access unit (CAU), 908
- coprocessor. *See also* central pro-
 cessing unit
 CPUs, 10, 118
- COPY command, 252
- Copy Disk command, 255
- copyrights, software, 1085–1087
- CPU. *See* central processing unit
- crash. *See also* preventive mainte-
 nance; troubleshooting
 rescue disks, 101, 255, 341, 401,
 402, 431–432, 526
 troubleshooting, 217, 376
- crosstalk, 904. *See also* noise
- CSMA/CD. *See* Carrier Sense
 Multiple Access with Collision
 Detection
- CTS. *See* carpal tunnel syndrome
- customer. *See also* PC
 technician; user
 communicating with,
 1077–1080
- CVF. *See* compressed volume file
- Cyrix, 123, 125, 133
- D**
- data, protecting, 433
- data communications equipment
 (DCE), 854
- data compression, 321, 517–518.
See also disk compression
 modems, 847, 851
 multimedia, 531–532
- data line protector, discussed,
 582–583
- Data Over Cable Service
 Interface Specifications
 (DOCSIS), 884
- data protection. *See also* backups
 documentation, 102
 electrical shielding, 102
 hard drive backup, 101–102
- OS rescue disks, 101, 255, 341,
 401, 431–432, 526
- saving setup
 with Norton Utilities, 99–100
 with Nuts & Bolts, 97–99
- data terminal equipment
 (DTE), 854
- data transfer. *See also* modems
 hop count, 916
 isochronous, 470
 to remote computer, 874
 tick count, 916
- DCE. *See* data communications
 equipment
- DEBUG command, 377
- DEBUG utility. *See also*
 troubleshooting
 boot record, F4–F7
 in general, D9–D11, F2
 using, F2–F4
- defragmentation. *See also*
 hard drive
 hard drive, 317–318, 361
- DEL command, 251
- DELTREE command, 253
- desktop, 30
- device. *See* peripheral devices
- device drivers. *See also* hardware
 devices
 CD-ROM, 525
 DOS, 451, 525
 in general, 450
 load size requirements, 203
 loading, 73
 in memory, 202–203
 printers, 1003
 SCSI, 289, 358–359
 Advanced SCSI Programming
 Interface, 289
 Common Access Method, 289

- 16-bit, 632–633
- 16-bit or 32-bit, 210
- software requirements, 26
- sound card, 534–535
- supplied by manufacturer, 631
- troubleshooting, 1003
- video, 413
- virtual, 209, 612
- Windows 9x, 451–454, 525, 602
- DHCP. *See* Dynamic Host Configuration Protocol
- diagnostic cards. *See also* troubleshooting
 - POST diagnostic cards, 403, 417
- dial-up networking (DUN). *See also* communications software; Internet; network interface card; networking
 - dial-up adapter, 924–925
 - dial-up connection, 921–924, 925
 - direct cable connection, 926–927
 - in general, 920–921
 - Point-to-Point Protocol, 920–921
 - network resources use, 930–932
- digital camera. *See also* multimedia
 - discussed, 542–544
- digital diagnostic disk (DDD), 259
- Digital Subscriber Line (DSL), 885, 959. *See also* modems
- digital video disc (DVD), 545–547
 - installing, 819–826
- DIME. *See* direct memory execute
- DIMMs. *See* dual inline memory modules
- DIP switch, 71, 449. *See also* jumpers; system board
 - data stored on, 94
 - in general, 23, 341
 - on jumper-free system board, 830–833
- direct memory access (DMA)
 - channel. *See also* system resources
 - defined, 66
 - discussed, 90–91
 - managing, 80
- direct memory execute (DIME), 154
- directory. *See also* file; folder;
 - MKDIR command; root directory
 - default, 45
 - path, 46, 47
 - root, 45
 - subdirectories and, 46, 249, F16
 - UNIX, 969
- disc caching, 200. *See also* cache memory
- disk cloning software, 1056
- disk compression. *See also* data compression
 - DOS/Windows 3.x, 321–322
 - in general, 320, 321, 433
 - Windows 9x, 322–326
 - compressed drive, 322
 - compressed volume file, 322
 - DriveSpace, 322–323
- Disk Doctor, 370, 382
- Disk Minder, 363, 382
- disk mirroring, 1056
- disk striping, 1056
- Disk Tune, 367
- DISKCOPY command, 252
- .dll files, 645, 646–647
- DLL Show, 646–647
- DMA channel. *See* direct memory access channel
- DNS. *See* Domain Name Service
- docking station, 1017. *See also* notebook computer
- DOCSIS. *See* Data Over Cable Service Interface Specifications
- documentation, 159. *See also* troubleshooting
 - protecting, 102, 432, 1030
 - record and information tools, 1081–1082
 - in service calls, 1074
 - system board, 790, 791
 - technical, 1081
 - user, 1081
- domain, 665, 687
 - backup domain controller, 689
 - primary domain controller, 689
- domain name, 942
- Domain Name Service (DNS), 942
- Domain Name System, 942
- DOS. *See also* MSDOS.SYS; operating system; Windows
 - advantages and disadvantages, 34
 - applications under Windows 9x, 647–648
 - boot process, 67–75
 - hidden files, 73
 - commands, internal/external, 249
 - device drivers, 451
 - disk cache, 328
 - disk compression, 321–322
 - file extensions, 40, 47
 - filenames, 40
 - floppy drive management
 - COPY command, 252
 - DEL command, 251
 - DELTREE, 253
 - DISKCOPY command, 252
 - FORMAT command, 250

- in general, 249
 - LABEL command, 250
 - RECOVER command, 251
 - UNDELETE command, 251
 - XCOPY command, 253
 - in general, 28, 47–48
 - hard drive management
 - ATTRIB, 312–313
 - for batch files, 313–314
 - CHDIR, 311
 - in general, 308
 - MIRROR, 313
 - MKDIR, 309
 - PATH, 313
 - RMDIR, 311–312
 - TREE, 312
 - under Windows 9x, 329
 - UNFORMAT, 313
 - memory addressing, 41
 - memory management, 193–197
 - EMM386.EXE, 201–209
 - in general, 189–191
 - HIMEM.SYS, 199–200
 - loading device drivers high, 202–203
 - loading TSRs high, 203–205
 - MemMaker, 208–209
 - memory address, 191–193
 - real vs. virtual real mode, 212–214, 651
 - troubleshooting, E5–E6
 - prompt, 45
 - rescue disk, 101, 255, 341, 401, 402, 431–432, 526
 - saving files, 934–935
 - virtual DOS machine, 189–190, 212, 682, 686–687
 - with Windows 3.x, 34–35
 - Windows NT management, 711–712
- DOS User's Guide and Reference Manual*, 308
- DRAM. *See* dynamic memory
- Drive Image, 405
- DriveSpace, 322–323. *See also* disk compression
- DSL. *See* Digital Subscriber Line
- DTE. *See* data terminal equipment
- dual inline memory modules (DIMMs). *See also* memory described, 11
- duplexing, 1057
- dust, 1028
- DVD. *See* digital video disc
- Dynamic Host Configuration Protocol (DHCP), 942
- dynamic memory (DRAM). *See also* random access memory
- DDR SDRAM, 186
- Direct Rambus DRAM, 186–187
- ECC, parity, nonparity DRAM, 187–188
- in general, 139–141, 178
- ## E
- e-mail, 918
- EasyRestore, 405
- ECC. *See* error checking and correction
- EEPROM. *See* Flash ROM
- EIDE technology
 - compared to SCSI technology, 290
 - in general, 283–284
- electrical system. *See also* power supply; power system; voltage regulator
- AC and DC current, 560–561
- battery, 158
- components
 - capacitor, 565
 - conductors, 564
 - diode, 565
 - insulators, 564
 - semiconductors, 564
 - transistors, 565
- discussed, 20–21
- hardware requirements, 5, 6, 144
- electricity. *See also* electrical system; power supply
- amps, 558–559
- fuse, 562
- hot, neutral, ground, 561–563
- introduction, 556–557
- measures of, 557
- ohms, 559–560
- short circuit, 562, 576
- voltage, 558
- voltage, current relationship, 559
- voltage, current, resistance relationship, 560
- wattage, 560, 574
- electromagnetic interference (EMI), discussed, 565–566
- electrostatic discharge (ESD), cautions for, 102, 343, 565–566
- Emergency Repair Disk (ERD). *See also* rescue disk
- Windows NT, 708–710
- emergency startup disk. *See also* boot; rescue disk
- Windows 9x, 255–258
- cabinet file, 257–258
- EMI. *See* electromagnetic interference
- EMM386.EXE. *See also* DOS expanded memory simulation, 205
- in general, 201
- loading device drivers high, 202–203
- loading TSRs high, 203–205
- MemMaker, 208–209
- memory reports, 205–208
- upper memory blocks, 201–202

- Energy Star. *See also* power management
monitors, 416, 425, 492, 577, 579–581
Display Power Management Signaling, 579
PCs, 578
- ERD. *See* Emergency Repair Disk
- error checking and correction (ECC)
chips, 187
modems, 847, 852
parity error, 139–140
- error messages. *See also* troubleshooting
floppy drive, 262–263
indicated by beeps, 71
meanings of, A1–A3
- ESD. *See* electrostatic discharge
- Ethernet. *See also* network; networking
Carrier Sense Multiple Access with Collision Detection, 903
combo card, 913
discussed, 902–907
baseband/broadband, 905
10Base2, 906
10BaseT, 905
topology, 902
bridge, 907
bus, 902
collision, 903
contention-based, 903
gateway, 907
hub, 902
repeater, 906
router, 907
segmentation, 907
star, 902
switch, 907
- expansion cards. *See also* adapter card; video card
discussed, 9, 19
8-bit and 16-bit, 80
input/output card, 465–466
troubleshooting, 217–219, 415, 417
- expansion slots, 9, 10, 13, 15, 154
for add-on devices, in general, 454–455
discussed, 17, 141–142
PCI
in general, 17, 471–473
IRQ steering, 473–475
types
AGP, 17
ISA, 17, 476
PCI, 17
- expert systems, 1028
- F**
- fans. *See also* heat; power supply
CPU, 11, 125–126
installing, 794–797
heat sink, 126
power supply, 20
troubleshooting, 575–576
- FAT. *See* file allocation table
- fault tolerance, 1043
- FDDI. *See* Fiber Distributed Data Interface
- FDISK command, 378–379
- Fiber Distributed Data Interface (FDDI). *See also* cables
discussed, 909–911
backbone, 909
multiframe dialogs, 910
- field replaceable units, 111. *See also* system board
- file. *See also* directory; folder
corrupted, 381–383, 419, 433
Registry, 636–638
system files, 384
defined, 29
erased, 387–388
fragmented, 246
program file, 28
recovering, 388–389
saving, 934–935
- file allocation table (FAT)
FAT32, 298–299, 353–354
floppy drive, F9–F13
formatting, 245–247
in general, F7–F9
hard drive, 296–299
damaged, 381–383, F13
logical arrangement, 243
restoring damaged copy, F13
second copy of, F13–F14
- file allocation unit, floppy drive, 243
- file extensions
DOS, 40, 47
Windows 9x, 210
- file header, corrupted, 386
- file properties, 316
- file system, 672–673
- file transfer
from command prompt, 961
with FTP software, 962–964
in general, 961
- File Transfer Protocol (FTP), 918, 959, 962–964
- file virus, 1034–1035. *See also* viruses
macro virus, 1034
- filenames, DOS, 40
- fire extinguishers. *See also* PC technician; preventive maintenance
in general, 588–589
- firmware, 22, 26. *See also* BIOS
- First Aid 2000, 404

- Flash BIOS. *See also* BIOS
 - described, 10, 22
 - upgrades, 138
 - flash memory, 179–180. *See also* memory
 - flash ROM. *See also* read-only memory
 - in general, 137–138, 178–179
 - floppy drive, 7, 22. *See also*
 - hard drive; memory;
 - removable drive
 - adding new, 267
 - boot sector virus, 1033–1034
 - discussed, 15
 - file allocation table
 - formatting, 245–247
 - logical arrangement, 243
 - formatting
 - file allocation table, 245–247
 - in general, 239, 242
 - master boot record, 244–245
 - tracks and sectors, 244
 - installing, 808–814
 - logical storage scheme, 238, 242–243
 - directory, 246
 - file allocation table, 243
 - file allocation unit, 243
 - root directory, 247–249
 - managing
 - with DOS, 249–258
 - with Windows 9x, 253–258
 - physical storage scheme, 239–242
 - cluster, 246
 - read/write head, 240
 - sectors, 239, 243–244
 - tracks, 239, 244
 - replacing
 - adding new, 267
 - checks and tests, 266–267
 - cover removal, 264–265
 - inspection, 263–264
 - removal, 265–266
 - replacement, 266
 - testing software, 258–259
 - digital diagnostic disk, 259
 - troubleshooting
 - error messages, 262–263
 - in general, 259–261, E8–E10
 - flow control. *See also* modems
 - modem, 859–861
 - in-band signaling, 860
 - out-of-band signaling, 860
 - folder. *See also* directory; file
 - creating, 314
 - deleting, 315
 - FORMAT command, 250
 - frames
 - network, 896
 - data frames, 900–901
 - FTP. *See* File Transfer Protocol
- G**
- gateways, 907, 915–916
 - alternate, 947
 - default, 947
 - GNOME. *See* GNU Network Object Model Environment
 - GNU Network Object Model Environment (GNOME), 971
 - graphical user interface (GUI), 30–31
 - graphics accelerators, 496. *See also* video card
 - group files, 619
 - GUI. *See* graphical user interface
- H**
- HAL. *See* hardware
 - abstraction layer
 - handshake. *See also* modems
 - modems, 844
 - hard coding, 71
 - hard copy, 7. *See also* printers
 - hard drive, 7. *See also* hard drive technology; hardware; removable drive
 - backups, 101–102, 361, 433–434, 1030
 - boot record, 354
 - components
 - adapter card, 13, 280
 - controller, 280, 283
 - cylinder, 279
 - head, 278
 - platter, 280
 - default drive, 45
 - defragmentation, 317–318, 361
 - disk cache
 - DOS buffers, 328–329
 - DOS/Windows 3.x, 328
 - in general, 200, 326–327
 - hardware/software cache, 327–328
 - VCACHE Windows 9x, 328, 525–526
 - disk thrashing, 606
 - formatting, 281–283
 - high-level, 282, 292, 354–355
 - interleave, 340
 - low-level, 282–283, 291, 379, 385
 - fragmentation, 317–318
 - in general, 13, 1030
 - installation. *See* hard drive installation
 - logical drive
 - boot record, 295–296
 - FAT32, 298–299, 353–354
 - FAT and root directory, 296–299
 - in general, 294–295
 - multiple, 353–354
 - virtual file allocation, 298

- logical organization
 - calculating drive capacity, 300–301
 - CHS mode, 302, 303–305, 349
 - ECHS mode, 302, 306
 - in general, 291–292, 299–300, 307–308
 - LBA mode, 302, 306–307, 350
 - organization, 301–302
 - physical/logical geometry, 302
 - translation methods, 305
- management
 - DOS commands, 308–314
 - DOS under Windows 9x, 329
 - Windows 9x commands, 314–317
- multiple, 289
- multiple operating systems on, 359–360
- optimization
 - cross-linked/lost clusters, 319–320
 - disk compression, 320–326
 - fragmentation, 317–318
- partitions
 - boot partition, 674
 - in general, 352–353
 - master boot record, 292–293
 - multiple logical drives, 353–354
 - partition table, 292, 294, 352, 355
 - system partition, 674
- root directory, 296–299
- slack, 299
- software installation, 355
- standby time, 578
- technology. *See* hard drive technology
- troubleshooting
 - corrupted files, 384–388
 - corrupted sectors, 385, 386–387
 - damaged boot record, 380–381
 - damaged FAT or root directory, 381–383
 - damaged partition table, 378–379
 - drive won't boot, 389–390
 - erased file, 387–388
 - file recovery, 388–389
 - in general, 355–357, 361, 375–378, E10
 - installation, 391
 - Partition Magic, 373–374
 - slow speed, 391
 - SpinRite, 374–375, 389
 - utility software, 362–375
 - types, B1–B3
- hard drive installation. *See also* hard drive
 - BIOS alterations, 351
 - BIOS won't support large drive, 350–351
 - in general, 340, 808–814
 - IDE drive, 340–347
 - informing setup of new drive, 347–349
 - SCSI drive, 357–359
 - setup, 349–350
 - troubleshooting, 391
- hard drive technology. *See also* hard drive
 - EIDE technology, 283–284
 - in general, 278–279
 - other interfaces, 291
 - reduced write current, 279
 - write precompensation, 279
 - IDE technology, 279–283
 - SCSI technology, 284–291
- hardware. *See also* backup hardware; cables; hardware devices; network hardware; peripheral devices
 - backward compatibility, 43
 - compared to software, 2–4, 22
 - configuration
 - CMOS chip setup, 158–159
 - in general, 158
 - defined, 2
 - electrical requirements, 5, 6
 - electrical system, 20–21
 - expansion cards, 19
 - in general, 4–5
 - coprocessor, 11
 - CPU, 4
 - microprocessor, 4
 - input/output, 5–7
 - keyboard, 6
 - monitor, 6–7
 - mouse, 6
 - port, 5
 - printers, 7
 - inside case
 - circuit board, 8, 9
 - expansion cards, 9
 - in general, 7
 - peripheral devices, 9
 - system board, 9–10
 - installation
 - Plug and Play, 626–634
 - unsupported devices, 629–632
 - legacy hardware, 135, 629, 633
 - for PCs, 783
 - processing
 - chip set, 10
 - coprocessor, 10
 - storage, permanent
 - floppy drive, 15
 - hard drive, 13
 - hard drive controller, 13

- storage, temporary
 - cache memory, 11
 - RAM, 11
 - SIMMs, 11
 - system board
 - components, 15–18
 - instructions and data, 21–24
 - hardware abstraction layer (HAL), 668
 - hardware devices. *See also* hardware
 - embedded BIOS on, 449–450
 - in general, 448–449
 - troubleshooting, E23–E24
 - hardware interrupts. *See also* interrupt request number
 - in general, 91–92
 - heat, 118, 125–126. *See also* fans
 - heat sink, 126
 - hexadecimal system
 - binary number system, D6–D8
 - in general, D1–D2
 - place value, D3–D6
 - hibernation, notebook computer, 1010–1011
 - hidden files, DOS, 73
 - HIMEM.SYS. *See also* device drivers; DOS
 - memory management, 199–200
 - holographic images, 1086
 - honesty, 1071
 - host, network, 896
 - host adapter. *See* SCSI host adapter
 - host controller, USB, 147
 - hot swapping, 147, 1019. *See also* Plug and Play
 - HTML. *See* Hypertext Markup Language
 - HTTP. *See* Hypertext Transfer Protocol
 - hubs, 147. *See also* Ethernet; network
 - Ethernet, 902
 - intelligent, 903
 - humidity, 361
 - Hypertext Markup Language (HTML), 961
 - Hypertext Transfer Protocol (HTTP), 918, 959
- I**
- I/O address. *See* input/output address
 - ICMP. *See* Internet Control Message Protocol
 - icon-driven interface, 30–31
 - IDE. *See* Integrated Device Electronics
 - IEEE 1394 port. *See also* ports
 - discussed, 470–472
 - hot-pluggable standard, 470
 - isochronous data transfer, 470
 - Image
 - Norton Utilities, 370
 - Nuts & Bolts, 363–365
 - images. *See also* digital camera; multimedia
 - digital, 180
 - Industry Standard Architecture (ISA)
 - 8-bit and 16-bit bus, 79–81
 - expansion slots, 17, 476
 - infestation, 1032. *See also* viruses
 - infrared transceivers, in general, 459
 - .ini (initialization) files, 601
 - discussed, 608–609
 - comment line, 609
 - input/output. *See also* input/output address; ports
 - hardware, 5–7
 - keyboard, 6
 - monitor, 6–7
 - mouse, 6
 - port, 5
 - printers, 7
 - input/output address. *See also* memory address
 - defined, 66
 - discussed, 88–90
 - input/output card. *See also* expansion cards
 - discussed, 466–468
 - instruction set, 115, 125
 - INT values, interrupts, 93–94, 446
 - Integrated Device Electronics (IDE)
 - hard drive
 - installation, 340–347
 - technology, 279–283
 - Integrated Services Digital Network (ISDN). *See also* modems
 - discussed, 882–883
 - external card, 883
 - internal card, 883
 - network card, 883
 - Intel, 10
 - Intel CPUs. *See also* central processing unit
 - chip sets, 131–133
 - competitors, 133–134
 - early, 117–118
 - form factors, 127, 129–130
 - Itanium, 125
 - Pentium
 - Classic Pentium, 121
 - comparisons, 118–120
 - competitors, 123–124
 - Pentium II, 121–122, 794–797
 - Pentium III, 122–123, 517
 - Pentium MMX, 116, 121, 512
 - Pentium Pro, 121
 - slots and sockets, 128–130

interface cards. *See* expansion cards

internal cache. *See* cache memory

International Telecommunications Union (ITU), 846

Internet. *See also* dial-up networking; network browsers, 918, 960–961 connecting to dial-up connection, 956–959 in general, 939, 955 Internet Protocol address, 939 default gateways, 947 domain name resolution, 942–943 domain names, 942 in general, 937–938 how it works, 938 IP address, 939 classes of, 940–941 dynamically assigned, 941–942 new, 942 physical address and, 944–946 network mask, 947 subnets and, 948–949 TCP/IP protocols, 943–944 Address Resolution Protocol, 944 connection protocol, 944 Internet Control Message Protocol, 944 NetBT, 943 Reverse Address Resolution Protocol, 944 User Datagram Protocol, 944 TCP/IP routing, 943, 946–947

Internet Control Message Protocol (ICMP), 944

Internet Network Information Center (InterNIC), 939

Internet Protocol address (IP address) binding, 945 classes, 940–941 classless address, 950 dynamically assigned, 941–942 in general, 939 Dynamic Host Configuration Protocol, 942 octet, 939 static/dynamic, 941 new, 942 physical address and, 944–946 Uniform Resource Locator, 959

Internetwork Packet Exchange/Sequenced Packet Exchange (IPX/SPX), 899

InterNIC. *See* Internet Network Information Center

interrupt handler, 91

interrupt request number (IRQ). *See also* system resources assignment of, 82 defined, 66 discussed, 81–84 hardware interrupts, 81 interrupt controller chip, 82 polling, 84 hardware interrupts, 91–92 IRQ steering, 473–475 for network cards, 914–915 software interrupts, 92–94

interrupt vector table, 91

intranet, 917. *See also* network

Iomega Zip drive, 268. *See also* backups; tape drives

IO.SYS on disk, 245 loading, 72, 73, 77–79, 608

IP address. *See* Internet Protocol address

IRQ. *See* interrupt request number

ISA. *See* Industry Standard Architecture

ISDN. *See* Integrated Services Digital Network

isochronous data transfer, 470

ITU. *See* International Telecommunications Union

J

Joint Photographic Experts Group (JPEG), 543

JPEG. *See* Joint Photographic Experts Group

jumpers. *See also* DIP switch; system board CPU settings, 119, 155–157 data stored on, 96 described, 23 in general, 71, 449, 467 IDE controllers, 809 setting on system board, 789–793, 864 clear CMOS RAM, 791 CPU bus frequency, 791–794 CPU multiplier, 791–794 keyboard power-up, 791 troubleshooting, 417

K

keyboard, 6, 71. *See also* hardware cables, 6, 422, 486–488 in general, 484–491 break code, 486 make code, 486 system board jumpers, 791 troubleshooting, 421–423, E12–E13

keyboard connectors, discussed, 485–487

L

L1 cache. *See* cache memory

LABEL command, DOS, 250

legal issues, 1071

license, software, 1085

line conditioner. *See* power conditioners

line protocol, PPP, 921

Linux. *See also* operating system in general, 968

process management, 971

UNIX

commands, 969–971

in general, 36–37

Windows managers, 971–972

Lost & Found, 389

lost allocation units, 386

M

MAC address. *See* media access control

McAfee Utilities, 404

Macintosh computer, 10

Mac OS, 39–40

Plug and Play, 136

PRAM chip, 23

macro virus, 1034. *See also* viruses

main directory. *See* root directory

mainboard. *See* system board

master boot record (MBR), 72.

See also boot; boot record

execution, 704

floppy drive, 244–245

hard drive, 292

material safety data sheet (MSDS), 1032

MAU. *See* multistation access unit

MBR. *See* master boot record

media access control (MAC)

address, 914

megahertz (MHz), 115. *See also* system clock

MEM command, 205–208

MEMMAKER, 208–209

memory. *See also* cache; memory address; random access memory; video memory

conventional, 193, 194–195

copying program into, 49

in CPU, 116

defined, 191

DIMMs, 11, 140, 184, 222

BEDO, 185

discussed, 185

SO-DIMMS, 1014

synchronous DRAM, 185

displaying with DEBUG, D9–D10

flash, 179–180

installing, 225–226

notebook computers, 1014–1016

pages, 196, 216

parity/nonparity, 187–188

physical, 178

printer, 999

recommendations for purchasing

new or used, 188–189

re-marked chips, 189

speed, 188

tin or gold leads, 188

RIMMs, 11

SIMMs, 11, 140, 221, 417

discussed, 184–185

EDO memory, 185

FPM memory, 185

swap file, 42

upgrades

advertisements about, 223–224

determining system limits, 219–223

in general, 219

installing, 225–226

selecting, 223

upgrading, 1014–1016

virtual, 42, 197, 605

volatile and nonvolatile, 11

memory address, 27. *See also* input/output address; system resources

assignment, 86–87, 135

BIOS and device drivers, 87–88

CPU capacity, 116

defined, 66, 191

in general 84–85, 144, 191–193, D8–D9

offset, D8

segment address, D8

map

base memory, 193

conventional memory, 193, 194–195

expanded memory, 193, 196–197, 205

extended memory, 193, 196

high memory area, 193

upper memory, 193, 194, 195, 201–202

shadow ROM, 88, 136, 191, 192

troubleshooting, 217–218

use, 86

memory bank, 219–220

memory bus. *See also* bus

Pentium chips and, 118–120, 131–132

memory caching. *See* cache memory

memory management

DOS and Windows 9x, 189–198

troubleshooting, TSR won't load high, 217

Windows 9x, 209–215

Windows NT, 215–217

- memory mapping, described, 191–192
- memory paging, Windows 9x, 604–606
- memory reports, for UMBs, 205–208
- memory test, 799–803. *See also* troubleshooting
- MHz. *See* megahertz
- microprocessor, 4. *See also* central processing unit
- Microsoft Management Console, 766–769
- MIDI. *See* musical instrument digital interface
- MIRROR command, 313, 378–379
- MKDIR command. *See also* directory; DOS
 - in general, 309
 - syntax and examples, 310
- modem riser card, 842
- modems. *See also* communications software; data transfer
 - cable modem, 884–885, 959
 - Data Over Cable Service Interface Specifications, 884
 - computer-to-modem communication, 854–863
 - data communications equipment, 854
 - data terminal equipment, 854
 - transmission speed, 855–856
- data compression, 847, 851
- direct cable connection, 926–927
- discussed, 841–843
 - audio/modem riser, 842
 - demodulation, 842
 - digital signal, 842
 - full/half-duplex, 843
 - modulation, 842
 - RJ-11 connector, 843
- error checking and correction, 847, 852, 854
- external, 853, 864–865
- features, 854
- flow control, 859–861
 - in-band signaling, 860
 - out-of-band signaling, 860
- handshaking, 844, 852–854
 - carrier, 852
 - guard tone, 852
 - line speed, 853
 - start/stop bits, 854
- high-speed
 - Asymmetric Digital Subscriber Line, 885
 - bandwidth concerns, 881
 - cable modem, 884–885
 - Digital Subscriber Line, 885
 - digital T1 line, 881
 - G.Lite, 885
 - ISDN, 882–883
 - satellite, 885
- installing, 817, 863–867
- null, 926
- parity, 863
- PCMCIA, 1018–1019
- rating
 - in general, 843–844
 - handshaking, 844, 852–854
 - speeds, 844–846
- RS-232c serial port communication, 861–862
- speeds
 - baud rate, 844
 - bits per second, 844
 - 56 kbps, 850–851
 - line speed, 853
 - transmission speed, 855–856
- standards, 846–850
- Comité Internationale de Télégraphique et Téléphonique, 846
- International Telecommunications Union, 846
- ITU-T V.90, 848
- RS-232c serial port communication, 861–862
- testing, HyperTerminal software, 867
- troubleshooting, 867, 877–881, 973–974
- UART chip, 856–857
 - internal and external, 858–859
 - protocols, 862–863
- modulation, modems, 842
- monitor. *See also* hardware; video card
 - choosing
 - dot pitch, 491–492
 - EMR, 492
 - flat panel, 492–494
 - in general, 490
 - green, 416, 425, 492
 - interlacing, 491
 - multiscan, 492
 - refresh rate, 491
 - resolution, 492
 - screen size, 491
 - disposal, 1031–1032
 - Energy Star, 416, 425, 492, 577, 579–581
 - in general, 6–7, 489–490
 - flat panel, 489, 492–494
 - pixel, 7, 492, 498
 - LCD, 1008
 - “sleep” mode, 416, 425, 492
 - troubleshooting, 422–426, E13–E16
- motherboard. *See* system board

- mouse, 6, 487–489. *See also*
 - hardware
 - troubleshooting, E10
 - Moving Pictures Experts Group (MPEG), 531
 - MP3 player, 544
 - MPEG. *See* Moving Pictures Experts Group
 - MSDOS.SYS. *See also* DOS
 - on disk, 245
 - loading, 72, 73, 77–79, 608, 609
 - Windows configuration, 622–625
 - MSDS. *See* material safety data sheet
 - multiframe dialogs, 910
 - multimedia, 180, 511. *See also*
 - CD-ROM; sound card;
 - video card
 - CPU technologies and, 518–519
 - SIMD process, 519
 - data compression, 531–532
 - digital camera, 542–544
 - digital video disc, 545–547
 - digital-to-analog conversion, 532
 - fundamentals, 515–518
 - in general, 512–515
 - sample size, 517
 - sampling, 515
 - JPEG, 543
 - MP3 player, 544
 - MPC guidelines, 518
 - MPEG, 531
 - TWAIN technology, 542
 - video capturing card, 544–545
 - multimeter, 566–567
 - multiprocessing. *See* multitasking
 - multistation access unit (MAU), 908
 - multitasking
 - cooperative, 32
 - CPU capacity, 116
 - in general, 31–32, 290
 - preemptive, 32
 - multithreading, 683
 - musical instrument digital interface (MIDI), 530
- N**
- NADN. *See* nearest active downstream neighbor
 - NAUN. *See* nearest active upstream neighbor
 - nearest active downstream neighbor (NADN), 909
 - nearest active upstream neighbor (NAUN), Token Ring, 909
 - NetBEUI, 917
 - network. *See also* Internet
 - in general, 687–689, 896
 - frame, 896
 - header, 896
 - host, 896
 - nodes, 896
 - packet, 896
 - hardware. *See* network hardware
 - OSI layer model
 - application layer, 899
 - data frames, 900–901
 - data-link layer, 900
 - in general, 897–898
 - network layer, 899–900
 - physical layer, 900
 - presentation layer, 899
 - session layer, 899
 - transport layer, 899
 - PC service
 - in general, 933
 - log off network, 934
 - restore and reconnect, 936–937
 - save files, 934–935
 - using Windows, 935–936
 - verify network readiness, 933–934
 - software. *See* networking software
 - subnets and, 915, 948–949
 - technology. *See* network technologies
 - troubleshooting
 - dial-up problems, 973–974
 - Packet Internet Groper, 974–975
 - TCP/IP problems, 974–975
 - user accounts, 690–694
 - WAN connections, 949–951
 - workgroups and domains, 689–690
 - network architecture, 896
 - network configurations
 - dedicated-server, 919
 - back end, 919
 - front end, 919
 - middleware, 920
 - peer-to-peer, 918
 - network drive map
 - mapping, 967
 - preparing for, 964–966
 - network hardware. *See also* hardware
 - bridges, 915–916
 - in general, 912
 - network interface card, 912–915
 - router tables, 916
 - routers, 915–916
 - network interface card (NIC)
 - discussed, 912–915
 - media access control address, 914
 - transceiver, 913

- installing
 - under Windows 9x, 929
 - under Windows 2000, 930
 - under Windows NT, 927, 928–929
 - PCMCIA cards, 1018–1020
 - network mask, 947
 - network resources, using, 930–932
 - network services
 - chat rooms, 918
 - e-mail, 918
 - file transfer
 - from command prompt, 961
 - with FTP software, 918, 962–964
 - in general, 961
 - Linux, 968–972
 - network drive map, 964–967
 - Telnet, 918
 - upper-level protocols, 959–960
 - Web browsers, 918, 960–961
 - network technologies. *See also*
 - Ethernet
 - Ethernet, 902–907
 - FDDI, 909–911
 - in general, 901–902
 - summary, 911–912
 - Token Ring, 907–909
 - networking. *See also* dial-up networking
 - administration, 690–694
 - networking software. *See also* applications software; network software
 - in general, 916
 - protocols, 916
 - middleware, 920
 - network protocol, 917–918
 - FTP, 918
 - HTTP, 918
 - intranet, 917
 - NetBEUI, 917
 - Point-to-Point, 917
 - SMTP, 918
 - NIC. *See* network interface card
 - nodes. *See also* Ethernet; network
 - network, 896
 - peer-to-peer, 918
 - noise, 20, 575, 904. *See also* troubleshooting
 - Norton Ghost, 405
 - Norton Utilities. *See also* troubleshooting; viruses
 - Disk Doctor, 370, 382
 - Disk Editor, 371, 382, 383
 - disk formatting, 282
 - File Compare, 371
 - file recovery, 388–389
 - in general, 368, 405
 - Image, 370
 - Protection, 369
 - Registry Editor, 371
 - rescue disk, 369–370, 371, 373
 - saving setup data with, 99–100
 - Space Wizard, 371
 - Speed Disk, 371
 - System Doctor, 369
 - System Genie, 371
 - UnErase Wizard, 370–371
 - notebook computer. *See also* personal computer
 - in general, 1007–1009
 - Intel CPUs, 118
 - laptop computer, 1008
 - memory upgrades, 1014–1016
 - peripheral devices connection, 1016
 - docking station, 1017
 - PC cards, 1016–1020
 - power management, 1010–1013
 - hibernation, 1010
 - supporting, 1021
 - Windows 98 features, 1009
 - Windows 2000 features, 1013–1014
 - null modem connection, 458
 - Nuts & Bolts. *See also* troubleshooting
 - Registry Wizard, 638
 - saving setup information with, 97–99
 - utilities, 362–367, 405
 - Disk Minder, 363, 382
 - Disk Tune, 367
 - Image, 363–365
 - rescue disk, 365–366
- ## O
- octet, 939
 - operating system (OS). *See also* DOS; Linux; Windows
 - application management, 40
 - DOS file extensions, 40
 - DOS filenames, 40
 - DOS memory addressing, 41
 - boot process, 64–79
 - environment, 32–33
 - function, 25–27, 28
 - interfacing with, 30
 - command-driven interface, 30
 - icon-driven interface, 30–31
 - menu-driven interface, 30–31
 - multiple, 359–360, 626
 - operating modes, 41–43
 - protected mode, 42
 - real mode, 41, 189, 190, 651
 - virtual memory, 42
 - virtual real mode, 43
 - OS rescue disks, 101, 255, 341
 - Plug and Play, 35

starting up, 28–30
 program files, 28
 survey
 in general, 31–34
 multitasking, 31–32
 troubleshooting, 418
 OS. *See* operating system
 OS/2. *See also* operating system
 discussed, 39
 OSI layer. *See* network
 output. *See* input/output

P

packet, network, 896
 Packet Internet Groper (PING),
 974–975
 page, memory, 196, 216
 page fault, 606
 parallel port. *See* ports
 parity error. *See also* error check-
 ing and correction
 described, 139–140
 Partition Magic, 299,
 373–374, 405
 partition table. *See also* hard drive
 hard drive, 292, 294, 352, 355
 damaged, 378–379
 password
 on CMOS chip, 96
 startup, 96, 158
 path, 46, 47
 data path, 116
 PATH command
 DOS, 47–48, 74, 313
 Windows 9x, 317
 PC cards. *See also* notebook
 computer
 connecting to notebook com-
 puter, 1016–1020
 hot swapping, 1019
 standards, 1018
 in general, 180

PC. *See* personal computer
 PC technician. *See also*
 troubleshooting
 communication skills,
 1076–1080
 difficult situations, 1077–1080
 insolvable problems, 1080–1081
 new technology, 1084–1085
 phone support, 1075–1077
 professional organizations,
 1082–1084
 A+ Certification, 1082, 1084
 Computing Technology
 Industry Association, 1082
 qualities required, 1070–1072
 record and information tools,
 1081–1082
 service calls, 1074–1075
 software copyrights, 1085–1087
 support calls, 1072–1074
 PC-Diagnosys, 404
 PC-Technician, 403–404
 pcANYWHERE, 840. *See*
 also modems
 in general, 874–875
 remote control with, 875–877
 PCI. *See* peripheral component
 interconnect
 PCMCIA cards. *See* PC cards
 PDC. *See* primary domain con-
 troller
 Pentium. *See* Intel CPUs
 peripheral component
 interconnect (PCI)
 bus, 149–153, 472
 expansion slots, 17, 471–473
 PCI bus IRQ steering, 473–475
 pinouts, 151

peripheral devices. *See also* device
 drivers; hardware; *specific devices*
 applications software and, 454
 connecting to notebook com-
 puter, PC cards, 1016–1020
 described, 9, 446
 hardware devices, in general,
 448–449
 installing, 447–448, 826–828,
 829–830
 ports and expansion slots for, in
 general, 454–455
 system resources and, 446–447,
 475–477
 personal computer (PC). *See also*
 central processing unit; note-
 book computer; troubleshooting
 as basis for this book, 10
 building yourself
 CPU and fan installation,
 794–797
 DVD installation, 819–826
 floppy drive installation,
 808–814
 in general, 784–785, 786–787
 hard drive installation, 808–814
 jumper-free system board
 installation, 830–833
 modem, 817
 operating system installation,
 828–829
 parts selection, 785–786
 peripherals installation,
 447–448, 826–828, 829–830
 POST memory test, 799–803
 power cord and connectors,
 806–808
 process overview, 787–788
 RAM installation, 798–799
 SCSI host adapter installation,
 817–819

- setting jumpers on system board, 789–793
- sound card installation, 532–533, 816–817
- system board installation, 803–805
- video card installation, 800, 815
- cover removal, 264–265
- operation guidelines, 361
- remote control of, 873–874
- selecting
 - brand–name, 780, 781–782
 - clone, 780, 781–782
 - hardware, 783
 - proprietary systems, 782
 - purchasing, 781–782
 - software, 780
 - total package, 783–784
- servicing on network, 933–937
- warranties on, 781–782
- PGA. *See* pin grid array
- PIF files, 647
- PIF. *See* program information file
- pin grid array (PGA), sockets, 128–130
- PING. *See* Packet Internet Groper
- pixel, 7, 492. *See also* monitor
- Pizazz Plus, 203–204
- PKZIP, 321, 639. *See also* data compression
- Plug and Play (PnP)
 - BIOS, 136, 138, 300, 449, 628
 - in general, 35, 783
 - hardware installation
 - in general, 626–627, 629
 - legacy cards, 633
 - 16-bit driver problems, 632–633
 - troubleshooting, 633–634
 - unsupported devices, 629–632
 - hot swapping, 147, 1019
 - hot-pluggable standard, 470
 - how it works, 627–628
- PnP. *See* Plug and Play
- Point-to-Point Protocol (PPP), 917, 920–921. *See also* dial-up networking
 - as line protocol, 921
- Serial Line Internet Protocol, 921
- pointing devices
 - mouse, 487–489
 - trackball, 489
- polling. *See also* interrupt request number
 - IRQs, 84
- Portable OS Interface (POSIX), 677
- ports, 5. *See also* accelerated graphics port; expansion slots; input/output
 - for add-on devices
 - in general, 454–455
 - null modem connection, 458
 - parallel ports, 463–465
 - serial ports, 455–458, 463, 489
- IEEE 1394, 469–471
- on-board, 157–158
- parallel, 19, 456, 463–465
 - configuring, 465, 467
 - enhanced, 464
 - extended capabilities, 464
 - IEEE 1284, 465
 - standard, 464
- serial, 19, 455–458, 463
 - RS-232c serial port communication, 861–862
- UART chip, 460–463, 862–863
- USB, 467–469
- POSIX. *See* Portable OS Interface
- POST. *See* power-on self test
- power conditioners, 585
- power management. *See also* Energy Star
 - setup screen, 580–581
- power supply, 8, 10. *See also* electrical system; uninterruptible power supply
 - discussed, 20
 - installing, 576–577
 - troubleshooting
 - fan, 575–576, E7–E8
 - in general, 573, E6–E7
 - guidelines, 574–576
 - safety warning, 574, 799
 - upgrading, 576
- voltage measurement
 - procedure
 - floppy/hard drive, 573
 - in general, 566–569
 - system board voltage, 570–573
 - testing power output, 569–570
- power system. *See also* electrical system; electricity
 - troubleshooting, 414–415
- power-on self test (POST). *See also* boot
 - in general, 66–67, 70–72, 704
- PPP. *See* Point-to-Point Protocol
- preventive maintenance. *See also* troubleshooting
 - in general, 1028
 - dust, 1028
 - for moving equipment, 1030–1031
 - plan, 1028–1030
 - used equipment disposal, 1031–1032
 - material safety data sheet, 1032
- primary cache. *See* cache memory

primary domain controller (PDC), 689

print services, 918, 1004–1007

printers, 7. *See also* hardware

- default, 27
- dot-matrix, 997
- ink-jet, 994–996
 - in general, 994–995
 - photo-quality, 995–996
 - supporting, 996
- troubleshooting, 430–431, 996, E19

installation, 700–701

laser, 988–992

- beam detect mirror, 992
- control blade, 992
- resolution enhancement technology, 991
- scanning mirror, 990
- supporting, 993–994

sharing, print services, 918, 1004–1007

supporting

- ink-jet, 996
- laser, 993–994
- Windows 9x, 998–999

troubleshooting

- dot-matrix printer, 430, E18–E19
- drivers, 1003
- in general, 999–1000, 1007, E16–E17
- ink-jet printer, 430–431, 996, E19
- laser printer, 427–428, E17–E18
- printer cable, 1002
- self-test page, 1001–1002
- system test page, 1000

processor, 4. *See also* central processing unit

program files, 28. *See also* software

- corrupted, 385
- installing, 46–48

program information file (PIF), 210

program jump, 29

programming code

- CPU, 115
- ROM BIOS, 135

programs, 22. *See also* software

- 16-bit, compared to 32-bit, 43

protocols. *See also specific protocols*

- defined, 16, 457
- network, 916

Q

Quarter-Inch Committee (QIC), 1047

R

RAID. *See* redundant array of inexpensive disks

RAM. *See* random access memory

random access memory (RAM). *See also* cache memory; memory

- dynamic (DRAM), 139–141, 178
- DDR SDRAM, 186
- Direct Rambus DRAM, 186–187
- ECC, parity, nonparity DRAM, 187–188
- SyncLink (SLDRAM), 186

in general, 10, 11, 84–85, 139, 180–181, 186, 417

installing, 798–799

multibank DRAM, 499

parity error, 139–140

PRAM chip, 23

RAM drive, 198

static (SRAM), 139, 141, 178, 180

- cache memory, 181–182
- on system board, 182–184

RARP. *See* Reverse Address Resolution Protocol

read-only memory (ROM). *See also* memory; ROM BIOS

- flash ROM, 137–138
- instructions on, 22
- ROM BIOS, 22–23
- shadow ROM, 88, 136, 191, 192

record and information tools, 1081–1082. *See also* documentation; troubleshooting

RECOVER command, DOS, 251

Recovery Console, 757–760

rectifier, 561

redundant array of inexpensive disks (RAID), 1043. *See also* backups; hard drive

- discussed, 1056–1059
- disk mirroring, 1056
- disk striping, 1056
- duplexing, 1057

Registry. *See* Windows 9x

Registry Tracker, 371

removable drives. *See also* backups; floppy drive; hard drive

- discussed, 1049–1050
- in general, 267
- hard disk, 268–269
- high-capacity, 268
- installing, 269

repeater, 906

- amplifying, 906
- signal-regenerating, 906

repetitive stress injury (RSI), 484

rescue disk, 101, 255, 341. *See also*
 emergency startup disk;
 troubleshooting
 creating, 431–432
 DOS, 402
 Norton Utilities, 369–370,
 371, 373
 Nuts & Bolts, 365–366
 troubleshooting with, 400–401
 Windows 9x, 402, 526–527
 resolution enhancement technol-
 ogy (RET), 991
 resources. *See* software resources
 management; system resources
 RET. *See* resolution enhancement
 technology
 Reverse Address Resolution
 Protocol (RARP), 944
 RISC technology, 125
 RJ-11 connector, 843
 RJ-45 connector, 904
 RMDIR command, 311–312
 ROM BIOS. *See also* BIOS;
 read-only memory
 in general, 22–23, 68–69,
 134–136
 ROM. *See* read-only memory
 root directory. *See also* directory
 damaged, 381–383
 floppy drive, 247–249
 hard drive, 296–299
 organizing, 431
 repairing, F14–F18
 UNIX, 969
 router, 907, 915–916
 router tables, 916
 route discovery, 916
 RS-232c serial port, modem
 communication, 861–862
 RSI. *See* repetitive stress injury

S

SAM. *See* security accounts
 manager
 sampling
 multimedia, 513
 sample size, 529
 sampling rate, 529
 sound card, 529–530
 analog-to-digital, 529
 digital to analog, 529
 pulse code modulation, 529
 satellite, communications, 885
 ScanDisk, 298, 319–320, 361, 619
 scanner, 447–448
 SCSI. *See* Small Computer
 Systems Interface
 SCSI host adapter, 152. *See also*
 adapter card
 in general, 284, 478–483
 installing, 817–819
 issues, 290
 sector
 floppy drive, 239, 244
 hard drive, 385
 bad sectors, 386–387
 security accounts manager (SAM)
 database, 689
 segmentation, 907
 Serial Line Internet Protocol
 (SLIP), 921
 serial port. *See* ports
 server, 37, 122
 SET command, 74
 setup data. *See also* boot;
 troubleshooting
 protecting, 432
 saving
 with Norton Utilities, 99–100
 with Nuts & Bolts, 97–99
 shadow ROM, 88, 136. *See also*
 read-only memory
 shortcuts, creating, 616–617
 SIMMs. *See* single inline memory
 modules
 Simple Mail Transfer Protocol
 (SMTP), 918, 959
 single inline memory modules
 (SIMMs). *See also* memory
 described, 11
 SiS chip set, 133
 SLIP. *See* Serial Line Internet
 Protocol
 slots and sockets, 960. *See also*
 system board
 CPUs, 128–130
 low insertion force (LIF), 129
 pin grid array, 128
 staggered pin grid array, 128
 zero insertion force (ZIF), 129
 Small Computer Systems
 Interface (SCSI)
 compared to EIDE, 290–291
 in general, 284–286, 478
 burst transfer, 287
 LUN, 284
 SCSI bus adapter chip
 (SBAC), 285
 standards, 286–287
 hard drive installation, 357–359
 hardware and software
 device drivers, 289
 in general, 287
 host adapter issues, 290,
 478–483
 termination, 288–289, 358
 SCSI configuration automati-
 cally (SCAM), 287, 480
 smoke, 361
 SMTP. *See* Simple Mail Transfer
 Protocol

- sockets. *See* slots and sockets
- software. *See also* applications software; BIOS; communications software; operating system
- backward compatibility, 43
 - compared to hardware, 2–4, 22
 - copyrights, 1085–1087
 - defined, 2
 - diagnostic, 403
 - disk cloning, 1056
 - firmware (BIOS), 22, 25, 26
 - FTP, 962–964
 - in general, 25, 79, 784
 - hard drive, 351
 - information management and distribution by, 27
 - memory address, 27
 - installing, 44, 355
 - networking, 916–920
 - preinstalled, 780, 784
 - hard-disk loading, 1086
 - programs, 22
 - protecting, 433
 - re-installing, 419
 - resources management. *See* software resources management
 - selecting, 780
 - software layers, 26–27, 449
 - device drivers, 26
 - for testing DOS, 258–259
 - troubleshooting, 418–420, E22–E23
 - types
 - applications software, 25
 - firmware (BIOS), 25
 - operating systems, 25
 - software interrupts. *See also* interrupt request number
 - discussed, 92–94
 - software piracy, 1086
 - software resources management.
 - See also* system resources
 - configuration data
 - CMOS chip, 94–95
 - CMOS passwords, 96
 - DIP switches, 94
 - in general, 94
 - jumpers, 96
 - DMA channels, 90–91
 - 8-bit and 16-bit ISA bus, 79–81
 - hardware interrupts, 91–92
 - input/output address, 88–90
 - interrupt request number, 81–84
 - memory address, 84–85
 - assignment, 86–87
 - BIOS and device drivers, 87–88
 - shadow ROM, 88, 136, 191, 192
 - use, 86
 - software interrupts, 92–94
 - sound card. *See also* multimedia; video card
 - in general, 529
 - installing, 532–533, 816–817
 - drivers, 534–535
 - recording sound, 539
 - sampling and digitizing, 529–530
 - storing sound in files, 530–531
 - with Windows 9x, 535–538
 - controlling sounds, 540
 - Space Wizard, 371
 - SPGA. *See* staggered pin grid array
 - SpinRite, 374–375, 389
 - SRAM. *See* static ram
 - staggered pin grid array (SPGA), sockets, 128
 - standoff, 803
 - static electricity. *See* electrostatic discharge
 - static ram (SRAM). *See also* memory; random access memory
 - cache memory, 181–182
 - in general, 139, 141, 178, 180
 - on system board, 182–184
 - varieties
 - asynchronous SRAM, 184
 - burst SRAM, 183
 - pipeline burst SRAM, 183
 - synchronous SRAM, 183
 - storage. *See* memory; *specific storage components*
 - subnet, 915, 948–949. *See also* network
 - subnet mask, 948
 - support calls, 1072–1074. *See also* PC technician
 - support. *See* troubleshooting
 - surge suppressors. *See also* electrical system
 - in general, 581–582
 - clamping voltage, 582
 - joules, 582
 - let-through, 582
 - swap file, 42
 - Windows 9x, 214–215
 - switches, 907, 915–916
 - system board, 7. *See also specific system board components*
 - CD-ROM and, 521
 - components, 15–18, 111–113
 - bus, 16, 80
 - embedded, 114
 - field replaceable units, 111
 - system clock, 16
 - traces, 15
 - CPU. *See* central processing unit
 - documentation, 790

form factors, 110–111
 in general, 9–10, 20–21
 installing, 803–805
 jumper-free system board
 installation, 830–833
 standoff, 803
 instructions and data stored on,
 21–24
 BIOS/Flash BIOS, 22
 CMOS chip, 23
 DIP switch, 23
 firmware, 22
 jumpers, 23
 programs, 22
 jumper-free system board
 installation, 830–833
 manufacturers, 114
 memory test, 799–803
 overclocking, 123
 selecting, 113–114
 setting jumpers, 789–793
 slot vs. socket, 121–122
 SRAM on, 182–184
 troubleshooting, in general,
 415–417
 types
 AT, 110–114
 ATX, 110–114
 voltage measurement to,
 570–573
 system clock, 16
 Cas Latency, 188
 discussed, 115
 System Configuration Utility,
 discussed, 652–653
 System Doctor, 369
 System File Checker, 764–765
 system files. *See also* file
 corrupted, 384

system performance monitoring
 control panel options, 650–652
 in general, 649–650
 System Monitor, 652
 system resources. *See also* software
 resources management
 device conflicts and, 446–447,
 477–479
 peripheral devices and, 446–447,
 449
 types, 66
 DMA channel, 66
 I/O address, 66
 IRQs, 66
 memory address, 66

T

tape drives. *See also* backups
 formats and types, 1047–1048
 in general, 1044
 interfacing with computer,
 1044–1045
 Iomega Zip drive, 268
 sequential access, 1044
 tapes used by, 1046–1047
 minicartridges, 1046
 troubleshooting, 1048–1049
 TAPI. *See* Telephony Application
 Programming Interface
 task switching, 32
 TCP/IP. *See* Transmission Control
 Protocol/Internet Protocol
 telephony, 867
 Telephony Application
 Programming Interface
 (TAPI), 867
 termination, SCSI, 288–289
 thread, Windows NT, 686
 token, 909
 limited, 910

Token Ring. *See also* Ethernet;
 network
 communication on, 909
 nearest active downstream
 neighbor, 909
 nearest active upstream
 neighbor, 909
 token, 909
 connecting components,
 908–909
 in general, 907
 controlled-access unit, 908
 multistation access unit, 908
 touch pad, 489
 traces, 15
 track, floppy drive, 239, 244
 trackball, 489
 transceiver
 combo card, 913
 infrared, 459
 NIC, 913
 transformer, 561
 Transmission Control
 Protocol/Internet Protocol
 (TCP/IP). *See also* Internet
 configuration
 Windows 9x, 951–953
 Windows 2000, 955
 Windows NT, 953–954
 in general, 899–900, 937
 NetBT, 943
 protocols
 Address Resolution Protocol,
 944
 connection protocol, 944
 in general, 943–944
 Internet Control Message
 Protocol, 944
 NetBT, 943

- Reverse Address Resolution Protocol, 944
 - User Datagram Protocol, 944
 - TREE command, 312
 - diagnostics, 404
 - troubleshooting. *See also* crash; DEBUG utility; preventive maintenance
 - CD-ROM, 540–542
 - crash, 217, 376, E22
 - diagnostics
 - PC-Technician, 403–404
 - POST diagnostic cards, 403, 417
 - software, 403
 - expansion cards, 217–219, 415
 - floppy drive
 - error messages, 262–263
 - in general, 259–261
 - in general, 400, 413, 1073
 - good practices
 - backups, 433–434
 - documentation, 432
 - rescue disk, 431–432
 - root directory organization, 431
 - setup data records, 432
 - software protection, 433
 - guidelines, E1–E24
 - hard drive
 - corrupted sectors, 385, 386–387
 - damaged boot record, 380–381
 - damaged FAT or root directory, 381–383
 - damaged partition table, 378–379
 - drive won't boot, 389–390
 - erased file, 387–388
 - file recovery, 388–389
 - in general, 355–357, 361, 375–378
 - installation, 391
 - Partition Magic, 373–374
 - slow speed, 391
 - SpinRite, 374–375, 389
 - utility software, 362–375
 - keyboard, 421–423
 - memory address, 217–218
 - modems, 867, 877–881, 973–974
 - monitor, 422–426
 - network
 - modem problems, 973–974
 - Packet Internet Groper, 974–975
 - TCP/IP problems, 974–975
 - noise, 20, 575, 904
 - operating system, 418
 - Plug and Play, 633–634
 - power supply
 - fan, 575–576
 - in general, 573
 - guidelines, 574–576
 - safety warning, 574
 - power system, 414–415
 - printers
 - dot-matrix printer, 430, E18–E19
 - ink-jet printer, 430–431, 996, E19
 - laser printer, 427–428, 1007, E17–E18
 - printer cable, 1002
 - self-test page, 1001–1002
 - system test page, 1000
 - software, 418–420, E22–E23
 - strategy
 - in general, 407
 - known good units, 412–413, 416
 - rules, 408–409
 - user interactions, 410–411
 - system board
 - in general, 415–417
 - memory test, 799–803
 - system performance, 649–650
 - tape drives, 1048–1049
 - tools
 - in general, 400–401
 - rescue disk, 101, 255, 341, 401, 402, 431–432, 526
 - TSRs, 217
 - utilities
 - Checkit 98, 405
 - Drive Image, 405
 - EasyRestore, 405
 - First Aid 2000, 404
 - McAfee Utilities, 404
 - Norton Ghost, 405
 - Norton Utilities, 405
 - Nuts & Bolts, 405
 - Partition Magic, 405
 - virus detection software, 406–407
 - Windows NT boot, 706–710
 - TSRs
 - in general, 74–75
 - loading in memory, 203–205
 - troubleshooting, 217, E5–E6
 - TWAIN technology, 542
- ## U
- UART chip
 - in general, 460–463
 - in modems, 856–857
 - internal and external, 858–859
 - protocols, 862–863
 - UDP. *See* User Datagram Protocol
 - UMB. *See* upper memory block
 - UNDELETE command, 251

UnErase Wizard, 370–371
 UNFORMAT command, 313, 378–379

Uniform Resource Locator (URL), 959. *See also* Internet Protocol address

uninterruptible power supply (UPS), 581. *See also* power supply
 in general, 584
 ferroresonant regulator, 583, 586
 inline UPS, 584, 586
 standby UPS, 584, 585–586
 intelligent UPS, 587
 line-interactive UPS, 586
 purchasing recommendations, 587

UNIX. *See* Linux

upper memory. *See also* memory address
 in general, 193, 194, 195, 201–202
 memory reports for, 205–208
 upper memory block (UMB), 202
 conflicts, 218–219

URL. *See* Uniform Resource Locator

USB
 bus, 146–147
 ports, 467–469

User Datagram Protocol (UDP), 944

user. *See* networking

V

vector table, 91
 VFAT. *See* virtual file allocation
 video capturing card, 544–545

video card. *See also* accelerated graphics port; adapter card; multimedia; sound card
 bus, 495–496
 dual-porting, 496
 discussed, 19, 494–495
 in general, 22–23, 71, 114
 graphics accelerator, 496
 installing, 800, 815
 video driver, 413. *See also* device drivers
 video memory. *See also* memory; random access memory
 allocating, 497–500
 in general, 496–497
 multibank DRAM, 499
 types
 SGRAM, 500
 3-D RAM, 500
 VRAM, 500
 WRAM, 500
 virtual file allocation (VFAT)
 hard drive, 298
 Windows 9x, 602–603
 virtual machine
 DOS, 189–190, 212, 682, 686–687
 Windows 9x, 603–604
 virtual memory, 42, 197, 603. *See also* memory
 Virtual Memory Manager (VMM)
 Windows 9x, 602, 604, 606
 disk thrashing, 606
 page fault, 606
 virus detection software. *See also* software; troubleshooting
 discussed, 406–407
 using, 1041–1043

viruses. *See also* Norton Utilities
 cloaking techniques, 1035
 encrypting, 1035
 in general, 1032
 logic bomb, 1033
 Trojan horse, 1033, 1038
 worm, 1033
 infestations, 1032, 1033, 1036
 how they spread, 1036–1039
 protecting against, 1039–1040, 1041
 protecting against, 1041
 replication, 91, 1037–1038
 symptoms, 1040
 types, 1033
 boot sector, 1033–1034
 file, 1034–1035
 macro, 1034–1035
 memory-resident, 1037
 multipartite, 1035
 non-memory resident, 1037
 polymorphic, 1035
 signature, 1035
 stealth, 1035–1036
 virus hoaxes, 1038–1039
 VMM. *See* Virtual Memory Manager
 voltage regulator. *See also* electrical system; power supply
 CPU, 130–131
 voltmeter, 558
 volumes, 1059

W

WAN. *See* wide-area network
 warranty. *See also* troubleshooting
 personal computers, 781–782, 786

- wattage. *See also* electricity
 - calculating, 560, 574
- WAV files, 530. *See also* sound card
- wavetable synthesis. *See also* multi-media; sound card
 - multimedia, 532
- wide-area network (WAN), connections, 949–951
- Windows 3.x, 28. *See also* DOS; operating system
 - disk cache, 328
 - disk compression, 321–322
 - DOS and, 34–35
 - environment, 33
- Windows 9x, 28. *See also* DOS; operating system
 - backups, 1054–1056
 - booting, 77–79
 - compared to DOS and Windows 3.x
 - in general, 600
 - memory paging, 604–606
 - 16-bit and 32-bit programming, 602–603
 - virtual machines, 603–604
 - Virtual Memory Manager, 602, 604
 - Windows 9x architecture, 601–602
 - Windows 9x core, 600–601
 - desktop, 30, 31
 - management, 616–618
 - Program Manager, 618
 - shortcuts, 616–617
 - troubleshooting, 617–618
- device drivers, 451–454, 602
- disk compression, 322–326
- DOS applications under, 647–648
- environment, 35–36
- floppy drive management
 - Copy Disk command, 255
 - emergency startup disk, 255–258
 - formatting, 253–254
 - rescue disk, 101, 255, 341
 - system disk, 253–254
- hard drive management
 - batch files, 317
 - create folder, 314
 - delete folder, 315
 - with DOS, 329
 - file properties, 316
 - in general, 314
 - PATH command, 317
- installing
 - configuring startup, 622–625
 - dual boot, 626
 - in general, 618–619, 620–622, 828–829
 - over DOS and Windows 3.x, 626
 - preparation for, 619–620
 - software, 49–50
- keystroke shortcuts, 615–616
- loading and running
 - initialization files, 608–609
 - startup customization, 608
- memory handling, 189–191
- memory management, 209–215
 - real vs. virtual real mode, 212–214
 - swap file, 214–215
- Microsoft support, 654–655
- NIC installation, 929
- notebook features, 1009
- printers, 998–999
- Registry
 - backups, 643
 - corrupted, 636–638, 760
 - editing, 639–640
 - in general, 635
 - modifying, 638–640
 - organization, 635–636
 - tracking changes to, 640–643
- Registry Checker, 636–638
- rescue disk, 101, 255, 341, 401, 402, 431–432, 526–527
- saving files, 934–935
- sound card, 535–538
- startup
 - configuration, 622–625
 - customization, 608, 622
 - in general, 609–613
 - menu, 613–615
 - Safe mode, 614
- TCP/IP configuration, 951–953
- upgrades, Windows Me, 653–654
- VCACHE, 328, 527–528
- Windows 98. *See also* DOS; operating system
 - compared to Windows 95
 - in general, 606–607
 - Windows 98 upgrades, 607–608
- Windows 2000. *See also* DOS; operating system
 - compared to Windows NT and Windows 98
 - in general, 737–742, 743–745
 - notebook computers, 743
 - dynamic drives, 1059
 - environment, 38–39
 - installation
 - clean, 748–751
 - in general, 745
 - on network, 747
 - planning for, 746–751
 - upgrade, 751–752
 - upgrade or clean, 748
 - NIC installation, 930

- notebook computer features, 1013–1014
 - suite of operating systems, 736–737
 - TCP/IP configuration, 955
 - troubleshooting
 - boot process, 754–757, E24
 - Chkdsk, 763
 - computer management, 765
 - Disk Defragmenter, 763
 - Emergency Repair Process, 760–763
 - in general, 752
 - Microsoft Management Console, 766–769
 - Recovery Console, 757–760
 - support tools, 769–770
 - System File Checker, 764–765
 - system state backup, 753–754
 - updates, 764
 - Windows Internet Naming Service (WINS), 942
 - Windows ME, 35, 653–654
 - Windows NT, 28. *See also* DOS; operating system
 - boot process, 701–705
 - boot discs, 706–708, 1030
 - Emergency Repair Disk, 708–710
 - troubleshooting, 706–710, E24
 - compared to Windows 9x
 - choosing between, 670–671
 - features, 667–670
 - in general, 666–667, 686
 - upgrading, 671–675
 - diagnostic tools
 - Event Viewer, 725
 - Task Manager, 722–724
 - Windows NT Diagnostic, 726–727
 - dual boot, 675
 - environment, 37–38, 190, 191, 676–677
 - kernel mode, 681, 683–684
 - multithreading, 683
 - subsystems, 682
 - user mode, 683, 684–685
 - file systems, 674–675
 - NTFS and FAT16, 675–677
 - hard drive partitions, 676–677
 - hardware abstraction layer, 670, 683
 - hardware installation, 722–724
 - installation
 - preparation, 694–696
 - printer, 700–701
 - step-by-step, 696–698
 - legacy software management
 - DOS applications, 711–712
 - problems, 713–714
 - 16-bit applications, 712–713
 - memory management, 215–217
 - memory model, 684–685
 - modularity
 - in general, 677–682
 - kernel mode, 683–684
 - memory model, 684–685
 - user mode, 681, 682–683
 - networking
 - administration, 690–694
 - in general, 687–689
 - NIC installation, 927, 928–929
 - user accounts, 690–694
 - workgroups and domains, 689–690
 - preparation for network drive map, 964–966
 - processes and threads, 685–686
 - Registry
 - backing up, 720
 - in general, 671–672, 714
 - organization, 714–717
 - subkeys and values, 717–720
 - software installation, 720
 - TCP/IP configuration, 953–954
 - virtual DOS machine, 686–687
 - WINS. *See* Windows Internet Naming Service
 - word size, CPU, 116
 - workgroup, 687
 - World Wide Web (WWW), 937
 - browsers, 918, 960–961
 - WWW. *See* World Wide Web
- X**
- XCOPY command, 253
- Z**
- zip drive. *See also* backups; tape drives
 - installing, 808–814
 - zone bit recording, IDE hard drive, 281

